


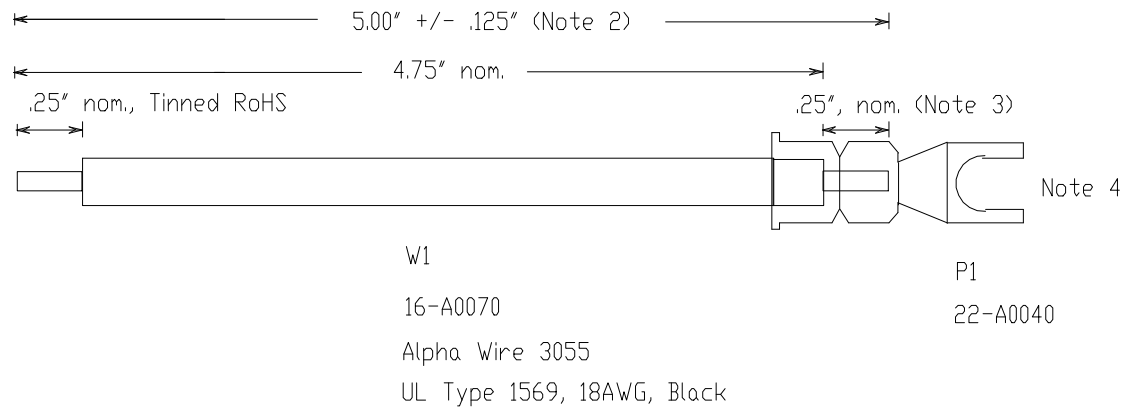

- Note 1: Crimp terminal P1 onto wire W1, do not solder.
- Note 2: For ACI internal use only. All other vendors may adjust strip length exposure to allow for internal quality inspection standards.
- Note 3: Do not tin.
- Note 4: Crimp terminal P1 should be crimped onto the untinned end of wire W1, as shown.

					APPLIED CONCEPTS, INC. - 02/04/14 27-R0063 Cable Assembly, RoHS Compliant
W1	Wire, 18 AWG, Black	AR	Alpha	3055BK005	
P1	Terminal,Crimp,4mm,Red	1	Multicomp	SVES1-4	
Ref. Des.	Description	Quantity	Manufacturer	Part Number	